

Disassembly Instructions - Throttle Body, Valve and Muffler - 7° Off-Set

Models: 15003, 15006

1. Carefully fasten the **01546** Housing in a vise with aluminum or bronze jaws so that the tool spindle is pointing down.



2. Pull the **01558** Collar back onto the throttle body housing. Use the **96460** Wrench to loosen the throttle body from the 7° housing. **Left Hand Thread** Turn clockwise.

Visit Our Website: www.dynabrade.com

Email: customer.service@dynabrade.com

DYNABRADE, INC. • DYNABRADE INTERNATIONAL
8989 Sheridan Drive, Clarence, New York 14031-1490 USA
Telephone: (716) 631-0100 • Fax: 716-631-2073 • Int'l Fax: 716-631-2524


DYNABRADE DO BRASIL
Rua Oneda, 632, Sao Bernardo do Campo • SP – CEP 09895-280
Telephone: 55-11-4390-0133 • Fax: 55-11-4399-1067

DYNABRADE EUROPE S.à.r.l.
Zone Artisanale, L-5485 Wormeldange—Haut, Luxembourg
Telephone: +352 768 494 1 • Fax: +352 768 495

DYNABRADE INDIA ABRASIVE POWER TOOLS Pvt Ltd.
EL-54, TTC Industrial Area, M.I.D.C. Mahape, Electronic Zone, Navi Mumbai - 400705
Maharashtra, India • Telephone: +91 22 2763 2226 • Fax: +91 22 2763 2228



Disassembly/Assembly Instructions

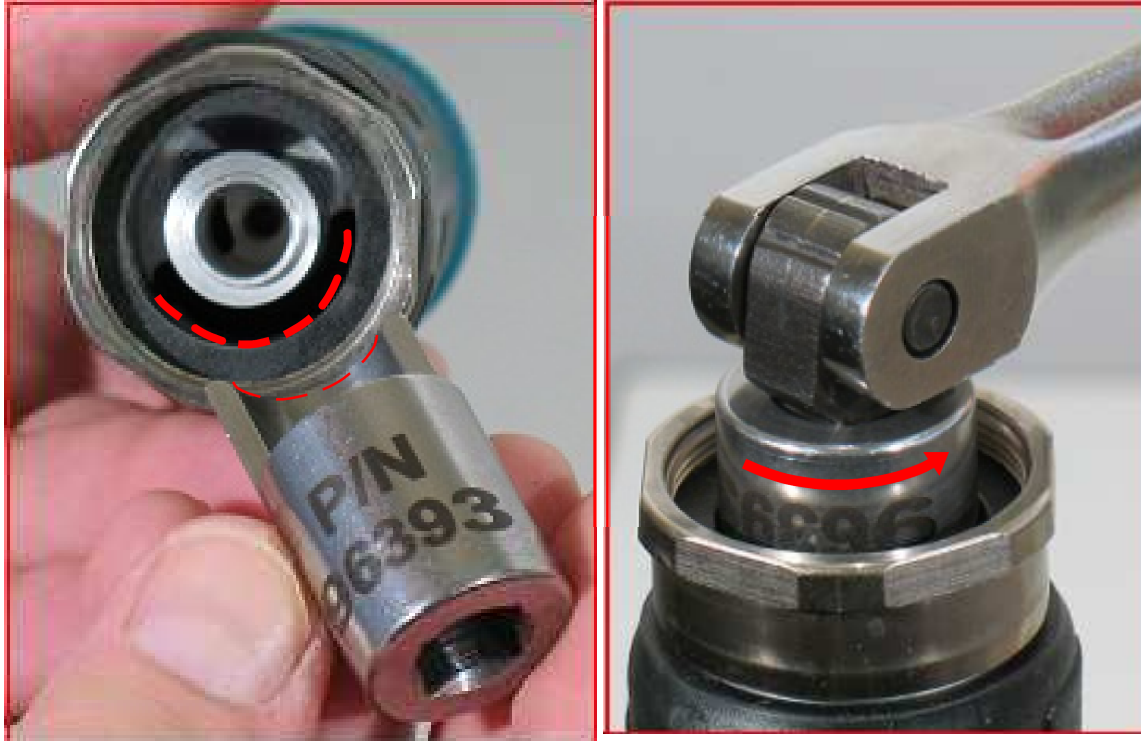

3. Fasten the **01578** Inlet Adapter in the vise with aluminum or bronze jaws so that the throttle body is pointing up.
 - Use the **96393** Throttle Body Socket to remove the throttle body from the muffler assembly. Turn counterclockwise.

 4. To disassemble the muffler and valve components, refer to, and follow the exploded view instructions found in the parts page or tool manual.
- Throttle Body, Valve and Muffler Disassembly Completed.**